

4 Button

TRANSMITTER

Garage Door and Gate Openers

PRODUCT CODE
062731

SUPERSEDED BY
62557



DESCRIPTION

This four button transmitter is a light weight transmitter that is small enough to fit on your car keyring.

The four buttons allow for use on multiple garage doors, gates and other B&D products with a Tri-Tran™ multi frequency.

SPECIFICATIONS

FREQUENCY

UHF Multi Frequency FM (Tri-Tran™ technology)

SUITS

CAD P
CAD S
CAD P DIAMOND
CAD P DIAMOND WQ - WHISPER QUIET
CAD DIAMOND PD - POWER DRIVE
FIRMAMATIC
(All models post Jan 08)

COLOUR

Red with 4 black buttons

CHANNELS

4 available buttons per transmitter

BATTERY

Lithium 3 volt CR2032

KIT CONTENTS

1 x transmitter
1 x Lithium 3 volt CR2032

HOW TO

HOW TO STORE THE TRANSMITTER CODE

The opener can only operate from transmitters that have been programmed into its receiver. The receiver needs to learn the codes of any transmitter that will be used with the opener. Up to fourteen (14) codes can be stored in the receiver's memory.

NOTE: Controll-A-Door S can only store a maximum of eight (8) codes.

- Ensure that the battery is inserted into the transmitter.
- Press the CODE SET button and release. The CODE SET LED will illuminate to indicate the opener is in Code Learn mode. If a valid code is not stored within 15 seconds the opener will exit Code Learn.
- Press the transmitter button (one of four) that you want to control the door. The CODE SET LED will begin to flash.
- Press the same transmitter button again. The CODE SET LED will illuminate for one second and then go out.
- The transmitter is now coded to operate the door - press the button to test.

HOW TO ERASE PROGRAMMED CODES

If the CODE SET button is pressed and held for 6 seconds the CODE SET LED will blink rapidly for one second to indicate that all programmed codes have been erased.