

M-802 40 MHz standard 2-button remote control

(to open up to two doors or gates)

- Uses Merlin's proprietary fixed code technology.
- Suits Merlin openers from 1994 to 2001 unless they are fitted with high security code-hopping receivers.
- Replaces remotes with either blue or red round buttons. (Incompatible with rectangular button remotes.)
- Suits gate openers fitted with Merlin M-500, M501 or M-502 receiver cards.
- This product is not waterproof

To fit the battery, remove the remote control from its holster, then press and slide the battery cover down. Match the + battery end to the mark on the case.


You must match the set of 12 code switches in this remote control to the code switches in your other remote controls, or to the code switches in your opener.

To expose the code switches on your remote control, remove the battery cover.

To expose the code switches on the door opener there will either be a small black plastic access panel or a side cover will need to be removed for access to the circuit board. If any screws must be removed from the opener to access the code switches, disconnect the opener from the mains power supply.

Match the code switches in the remote to the code switches in the opener.

To operate your opener from the smaller button, match the code switches, but reverse code switch #1 in the remote control. To operate an opener from each button, set the same code in each opener, but then reverse code switch #1 in one opener.

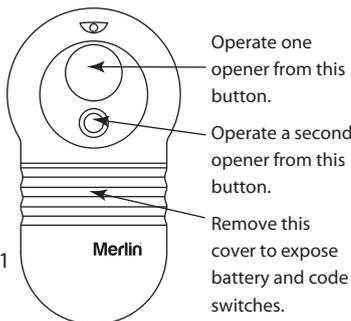

To attach to a wall or other flat surface use any suitable flat head screws through the holes in the holster.

To attach to a car sun visor insert the black metal spring clip into the slot in the holster. Stretch the clip and fit the holster over the visor.

To reduce risk of personal injury by the door or gate:

1. Only wall-mount the remote control above 1.5 m from the floor.
2. Only wall-mount the remote control in sight of the door or gate.
3. Supervise every operation of the door or gate.
4. Do not allow children to play with the door or gate controls.

To reduce risk of unauthorised access to your home or garage remove the remote control from your car when the car is unattended.

Merlin[®]

Garage Door Openers

Australia 1800 638 234

New Zealand 0800 653 667

www.gomerlin.com.au

Made in China



N2966



132A2838